


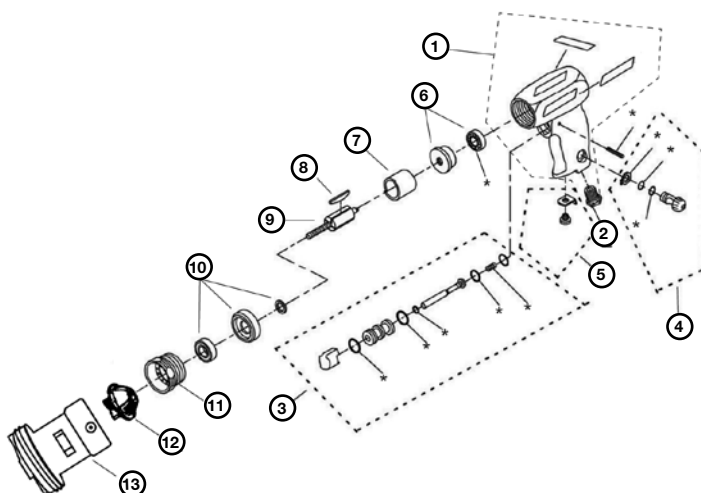

ITEM NUMBER	DESCRIPTION	PART NUMBER
1	Housing Assembly	317A-A40
2	Inlet Bushing (with Screen)	317A-3B
3	Trigger Assembly	317A-A93
4	Regulator Assembly	317A-A249
5	Muffler Kit	317A-AMK1
6	Rear-End Plate Assembly	317A-A12
7	Cylinder	317A-3
8	Vanes (Set of 4)	317A-42-4
9	Rotor	317A-53
10	Front-End Plate, Assembly	317A-A11
11	Motor Lock-Nut	317A-27
12	Motor Coupling	8333
13	Adaptor, Aluminum	9014



Read and understand operating and safety instructions before operating any Standard Pump product.