


Montageanleitung Clean Boy mobile 205 - 10 700 28
Instructions de montage Clean Boy mobile 205 - 10 700 28
Istruzioni di montaggio Clean Boy mobile 205 - 10 700 28

mato

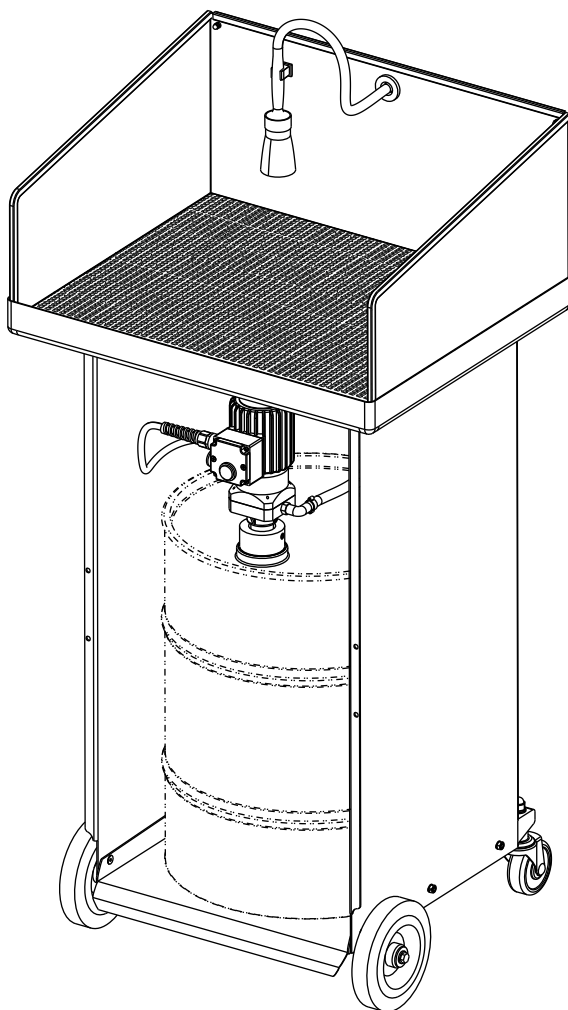

A



1a 6x M 4x10



1b 6x M4



1c 2x M4



1d 1x



1e 1x M6x10




1f 1x



1g 1x

1u 1x



1p 1x



1r 1x



1s 1x



1t 1x



2a 6x M6x12



2b 16x M6




2c 16x J6,4




2g 6x M6x16




2h 4x M6x12

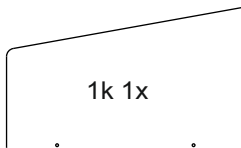


1k 1x

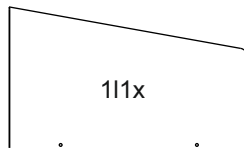

1l 1x



Typ : RKR XXXX
Baujahr : XXXX
Nummer : XXXX/XXX




1m 1x


1n 1x

1o 1x


B



2d 1x



2f 1x




2e 1x

C




ÖAM 60/1

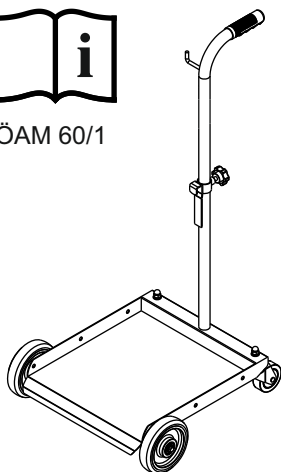

D




RKR E / D

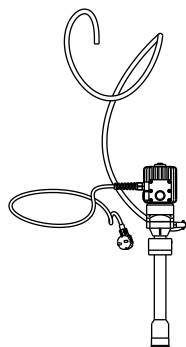


KRP E 1x

1

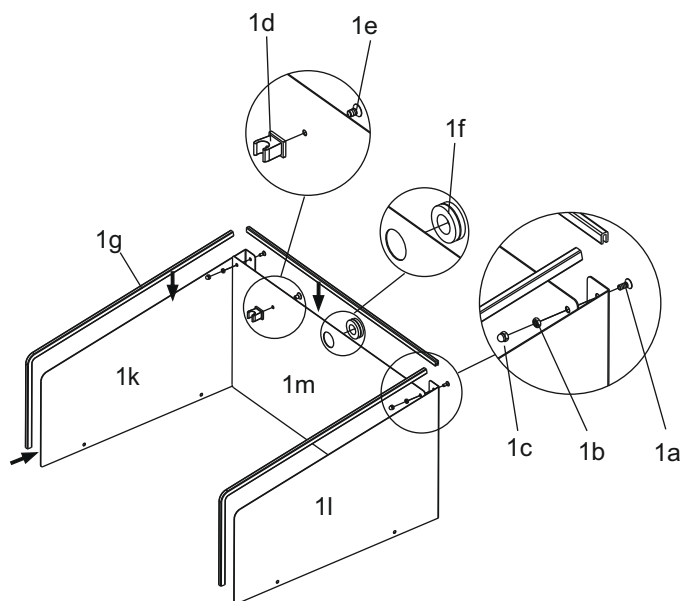


2

A

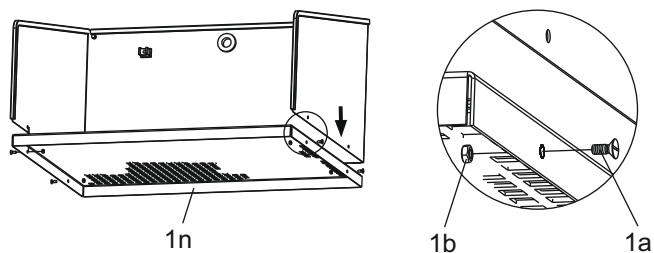


3

A

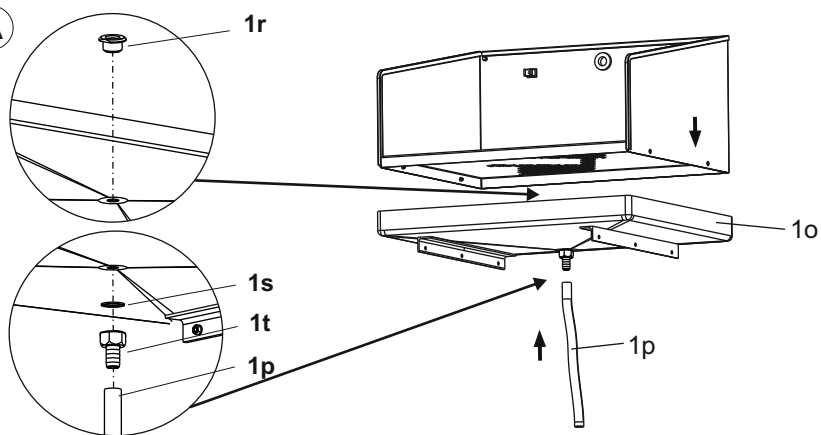



4

B

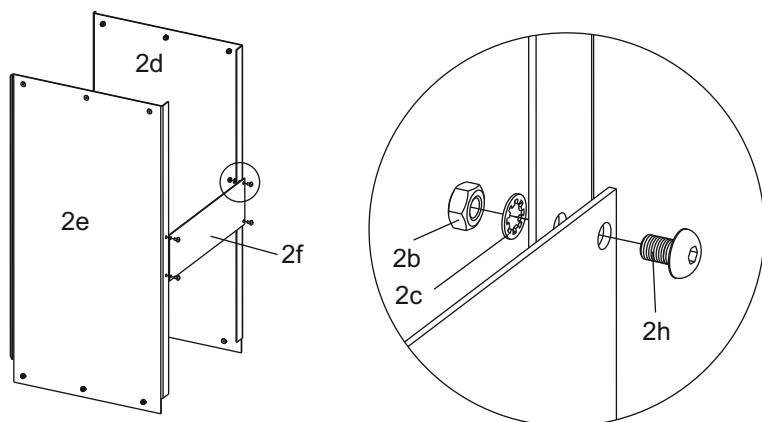



5

B + C

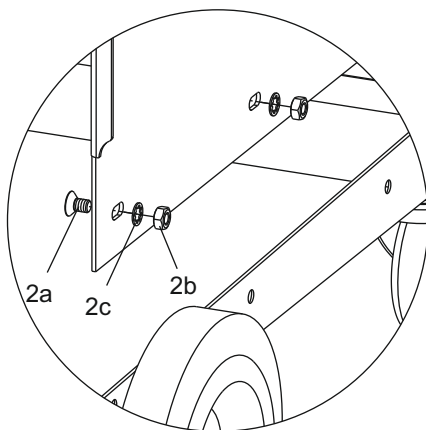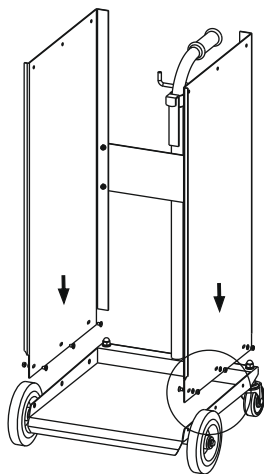



6

A + B + C

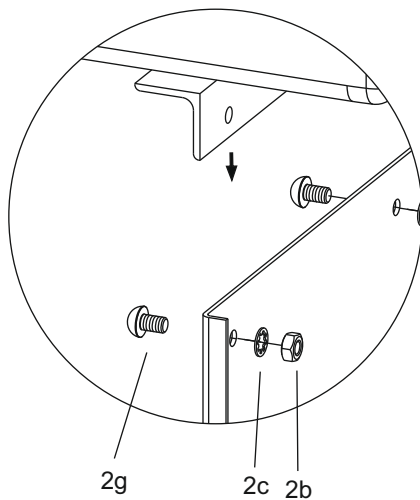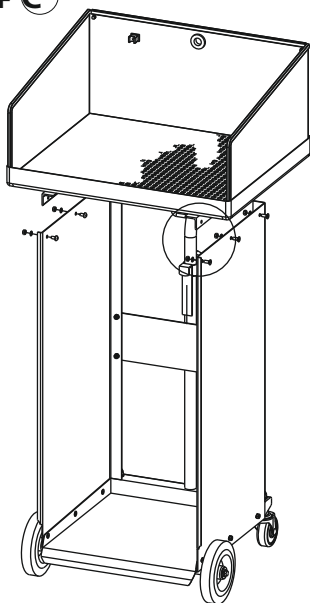


7

D

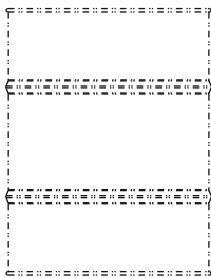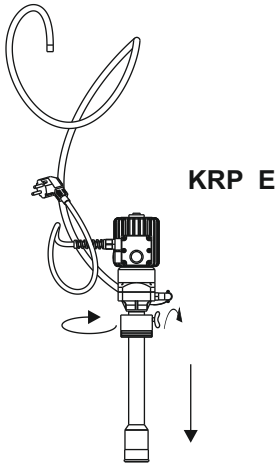


8

A + B + C + D

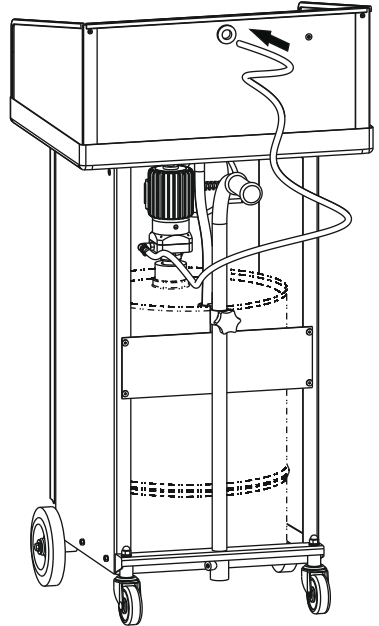

9

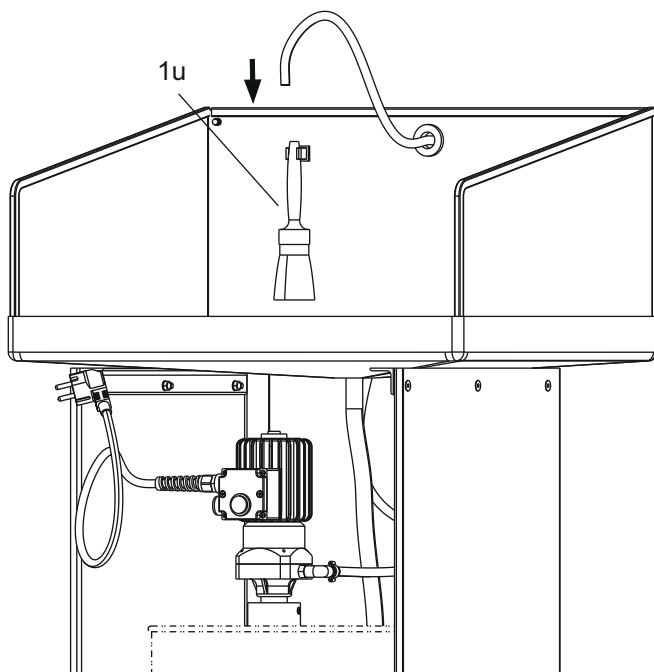

10

